


## WATCH OPERATION

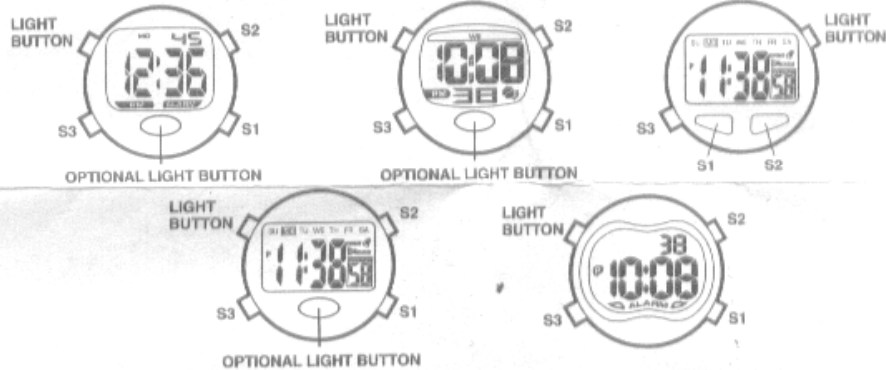

### LIGHT BUTTON :

The watch is equipped with an electroluminescence (EL) backlight, which can be activated by pressing the EL button. The LCD will light up for three seconds.

### CONTROL OF WATCHES :

Normal Display : Hour, Minute, Second and Day of week.  
 Push of S1-Button : Display shows alarm time in Hour and Minute.  
 Push of S2-Button : Month, Date and Day of week.  
 Push of S3-Button : For change of Function.

### ALARM OF CHIME ON / OFF :

In normal time : Hold S1-Button and Display shows alarm time in hour and Minute.

**Hourly Chime :** While holding S1-Button down, press S3-Button. When all 7 day flags show, the hourly chime is on. When no day flags show, the chime is off.

**Alarm :** While holding S1-Button down, press S2-Button. Alarm icon will display when alarm is on. Icon will disappear when alarm is off. Release S1-Button and Display changes to normal time immediately.

### CHRONOGRAPH MODE :

In normal time, Push S3-Button, chronograph Function will be set.

**Start/Stop :** Push S2-Button, it operates in cumulative counting up to 17100 second.

**Split time :** Change to Split Time from chronograph time display is performed by pressing S1-Button while chronograph is counting. Chronograph keeps counting while Split time is displayed. Push S1-Button again to return to chronograph Time display.

**Reset :** Push S2-Button to stop counting and then push S1-Button.

### ALARM TIME SETTING :

In normal time, push S3 twice to get into Alarm setting mode. Monday flag + Hour digits will flash which is advanced through depression of S2-Button.

1 x Push of S1-Button : Monday flag + Minute digits of the Alarm time will flash which is advanced as above.  
 Push of S3-Button : Display change to normal time again.

### NORMAL TIME SETTING :

In normal time, push S3-Button three times. Tuesday flag + second digits will flash. Push S2-Button and Second will be reset to zero.

1 x Push of S1-Button : Minute digits flash and advance by depression of S2-Button.  
 2 x Push of S1-Button : Hour digits flash and advance as above.  
 3 x Push of S1-Button : Date digits flash and advance as above.  
 4 x Push of S1-Button : Month digits flash and advance as above.  
 5 x Push of S1-Button : Flag of weekday flashes and advances as above.

Push of S1-Button and second will start for setting again.  
 If S3-Button is pushed during any time change Normal Time will resume on display.

### 12/24 HOURS REVERSAL OPTION :

You have the possibility to change from 12 to 24 hour system, when adjusting the hours of the normal time (description please see above) one after the other the hours are displayed in the 12 hour system, then in the 24 hour system and then again the 12 hour system, i.e. please push S2 so many times, that the hour is displayed in the required system. In the 12 hour system hours are identified by "A" for 24:00-12:00 and with "P" for 12:00-24:00 whereas in the 24 hour system all hours are identified with "H".

### ALARM TEST :

Hold S1-Button and then hold S2-Button together. Alarm will "Beep" and Alarm sounded.

### ALARM SOUND OFF :

To turn off beeping when alarm goes off press S1 or S2 button.  
 For some model, press light button also can turn off beeping when alarm goes off.  
 Alarm function with 4 to 5 minutes snooze by press S2 button.

### 2 YEAR LIMITED WARRANTY

The Advance Watch Co. Ltd. warrants that it will repair any failure due to defects in materials and/or workmanship free of charge. This warranty is by Advance Watch Co. Ltd., not by the dealer from whom it was purchased. This limited warranty does not cover replacement of crystal, battery, band, strap or case. Advance Watch reserves the right to replace any or all inside components in lieu of repair. This warranty does not cover any failure to function properly due to misuse such as water immersion or severe shock. If your watch ever needs service, wrap it carefully in tissue paper or a similar soft material and pack it in a mailing carton. Send it via insured Parcel Post to: "LCD SERVICE, 25800 SHERWOOD, WARREN, MI 48091-4160". Include a brief note explaining what is wrong. Be sure to print your name and address clearly. Enclose \$4.95 to cover the cost of return postage and handling.

"Do not send cash or checks. Only money orders, Master Card or Visa are accepted."

Card Holder Name: \_\_\_\_\_

M. C. \_\_\_\_\_ Visa \_\_\_\_\_

Account Number: \_\_\_\_\_

Expiration Date: \_\_\_\_\_

Visit us at [www.advancegroupinc.com](http://www.advancegroupinc.com)

AQT-INT-0002